

TRANSMISSION (Drive Line)



It transforms the chemical energy into mechanical energy ...

TRANSMISSION (Drive Line)




It is situated between the engine and the gearbox ... It is a crankcase ...

TRANSMISSION (Drive Line)




It adapts the engine torque to the resisting torque..

TRANSMISSION (Drive Line)

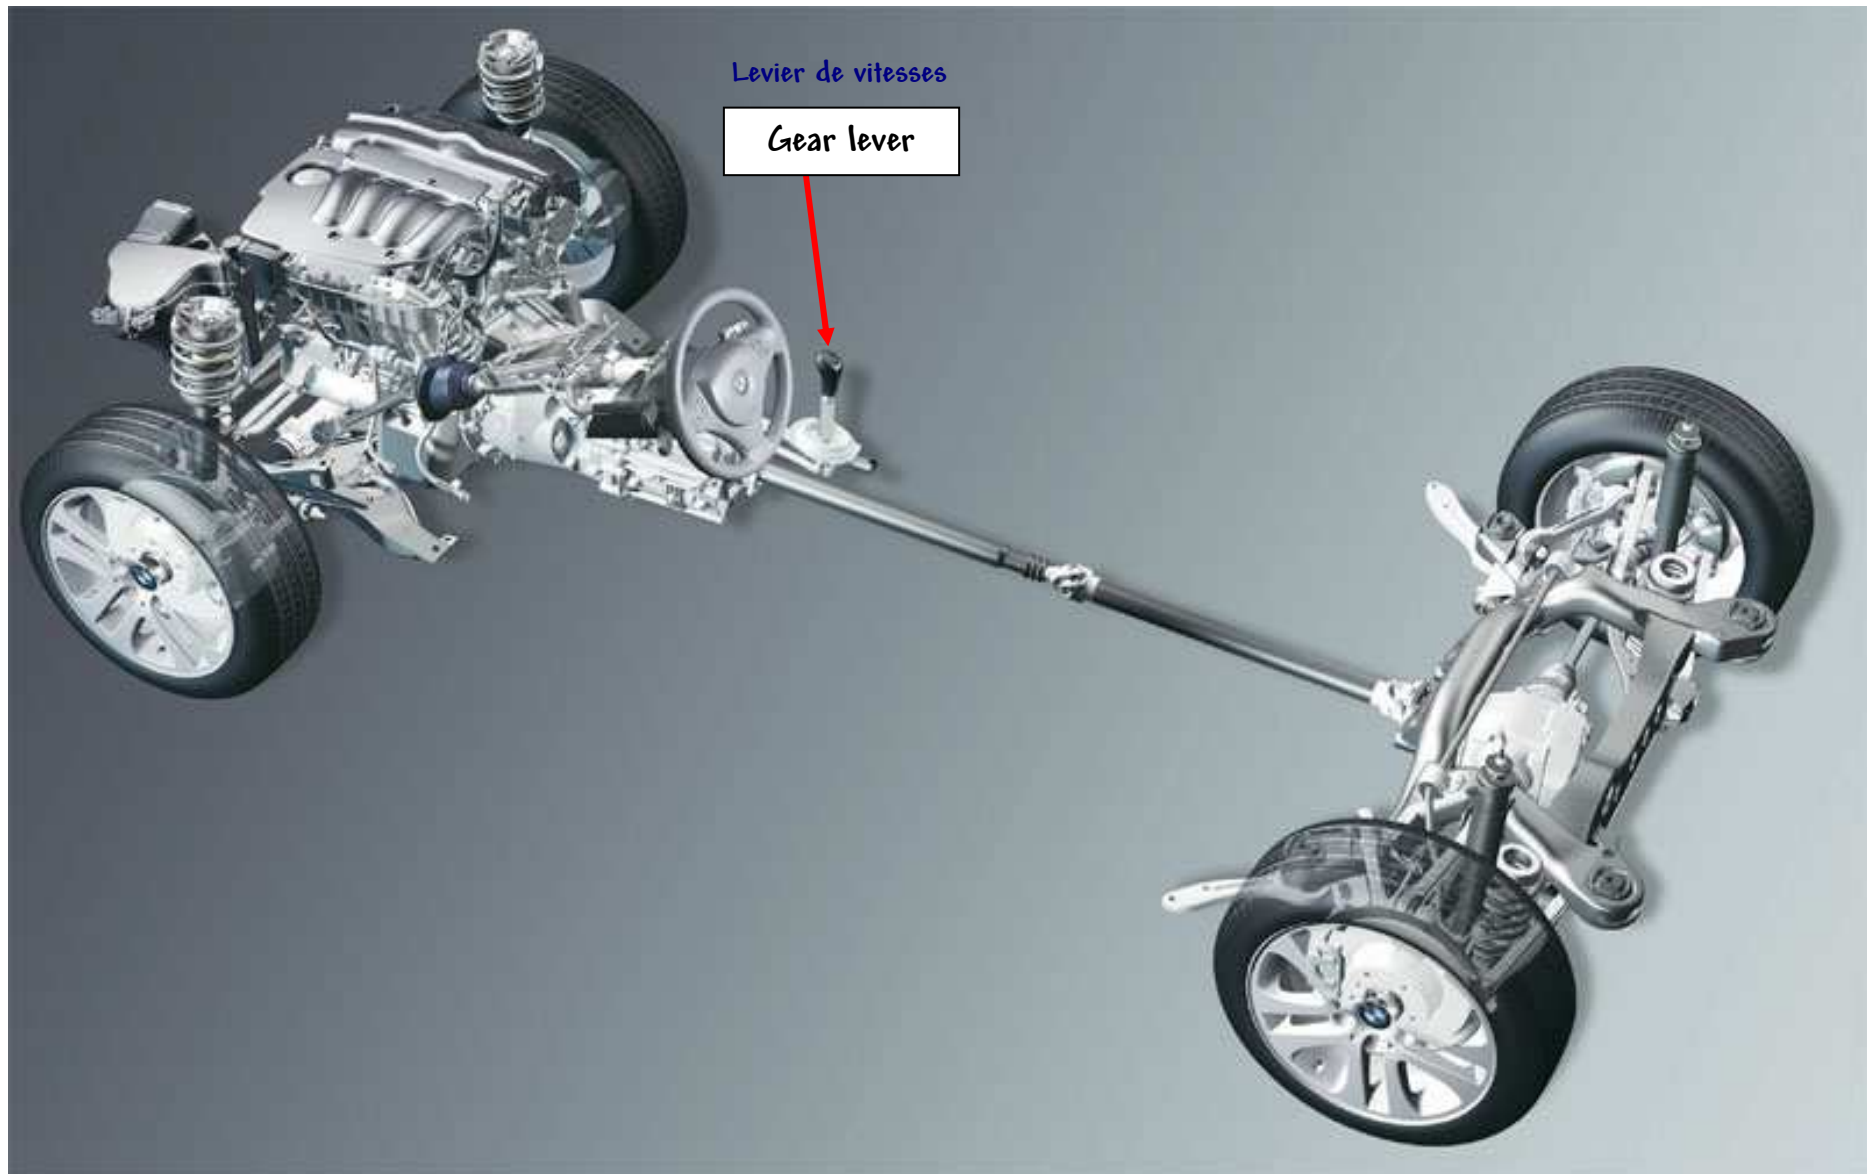


Situated in the passenger compartment, it allows the command of the gearbox..

TRANSMISSION (Drive Line)

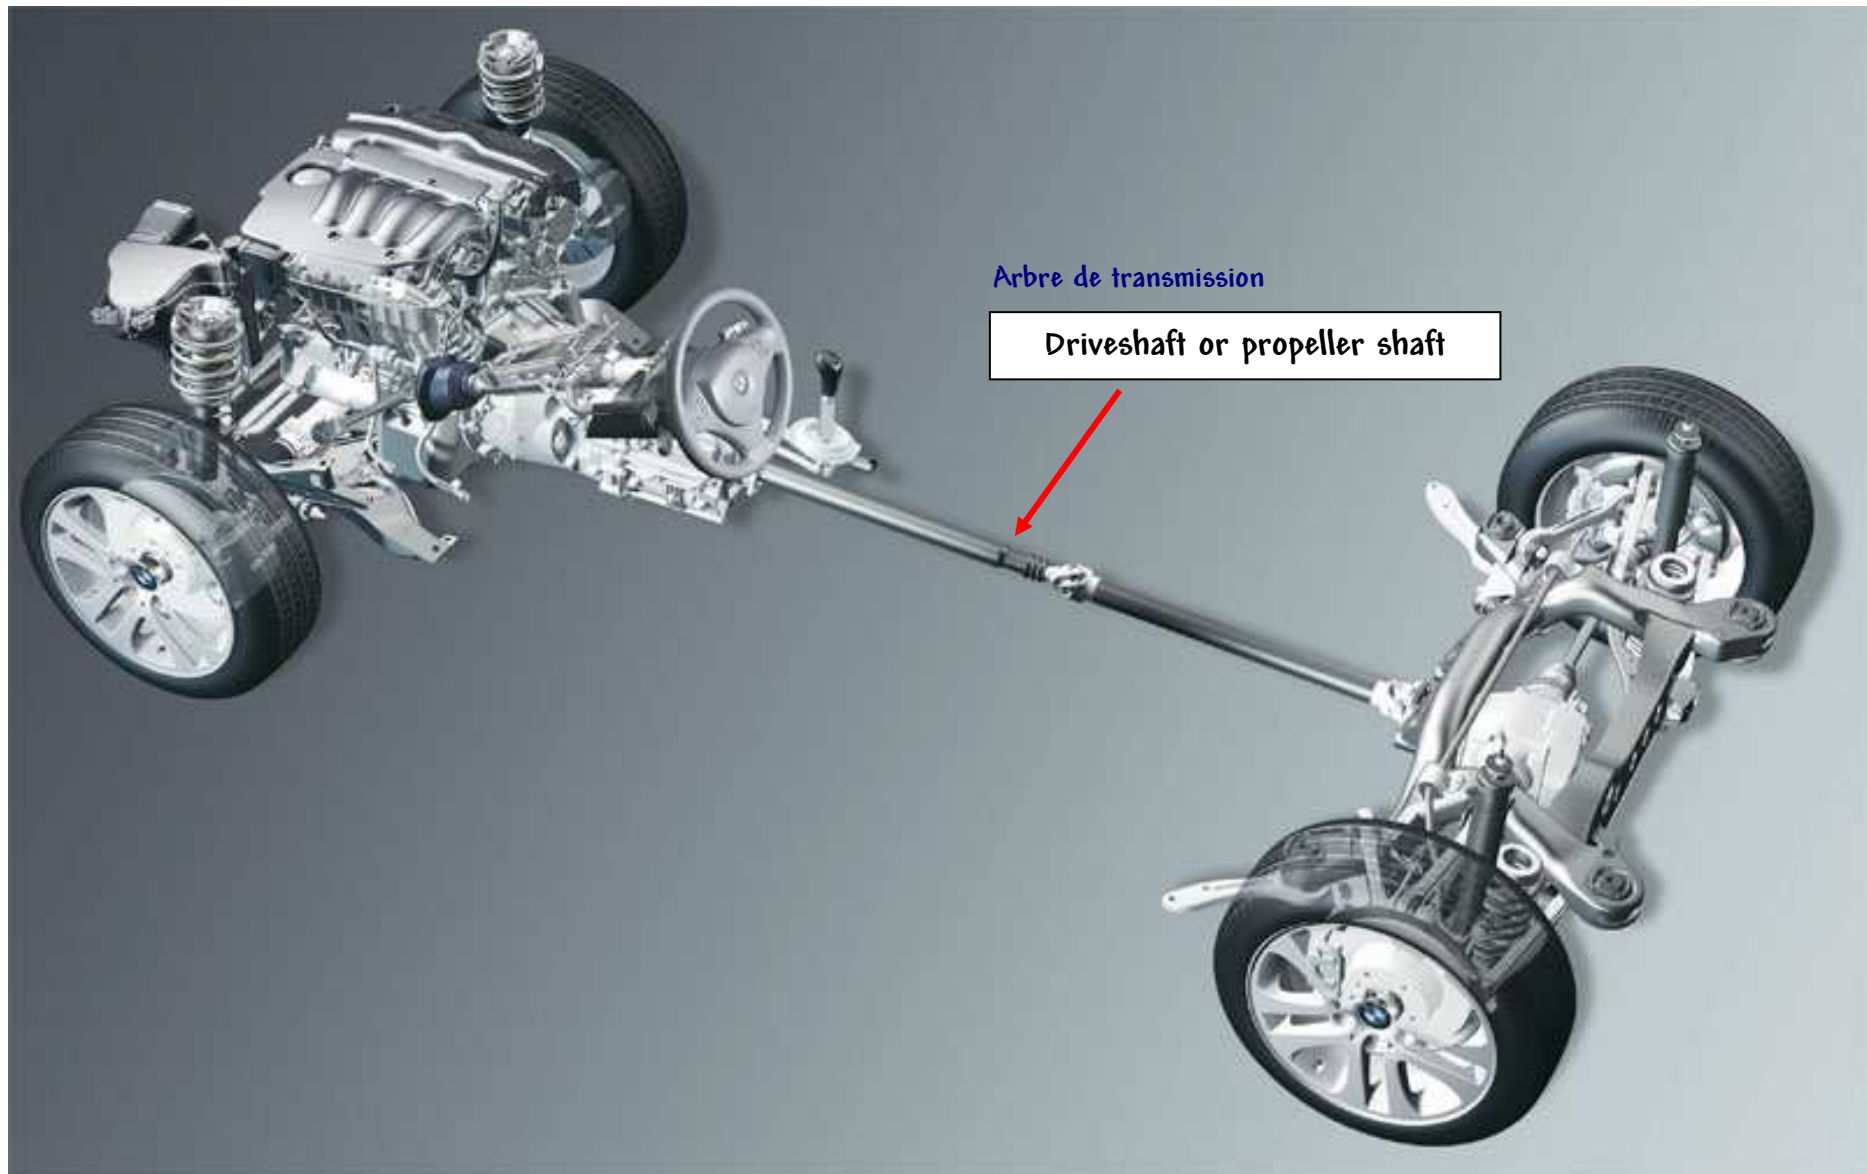

It passes on the rotation movement of the gearbox in the differential..

TRANSMISSION (Drive Line)

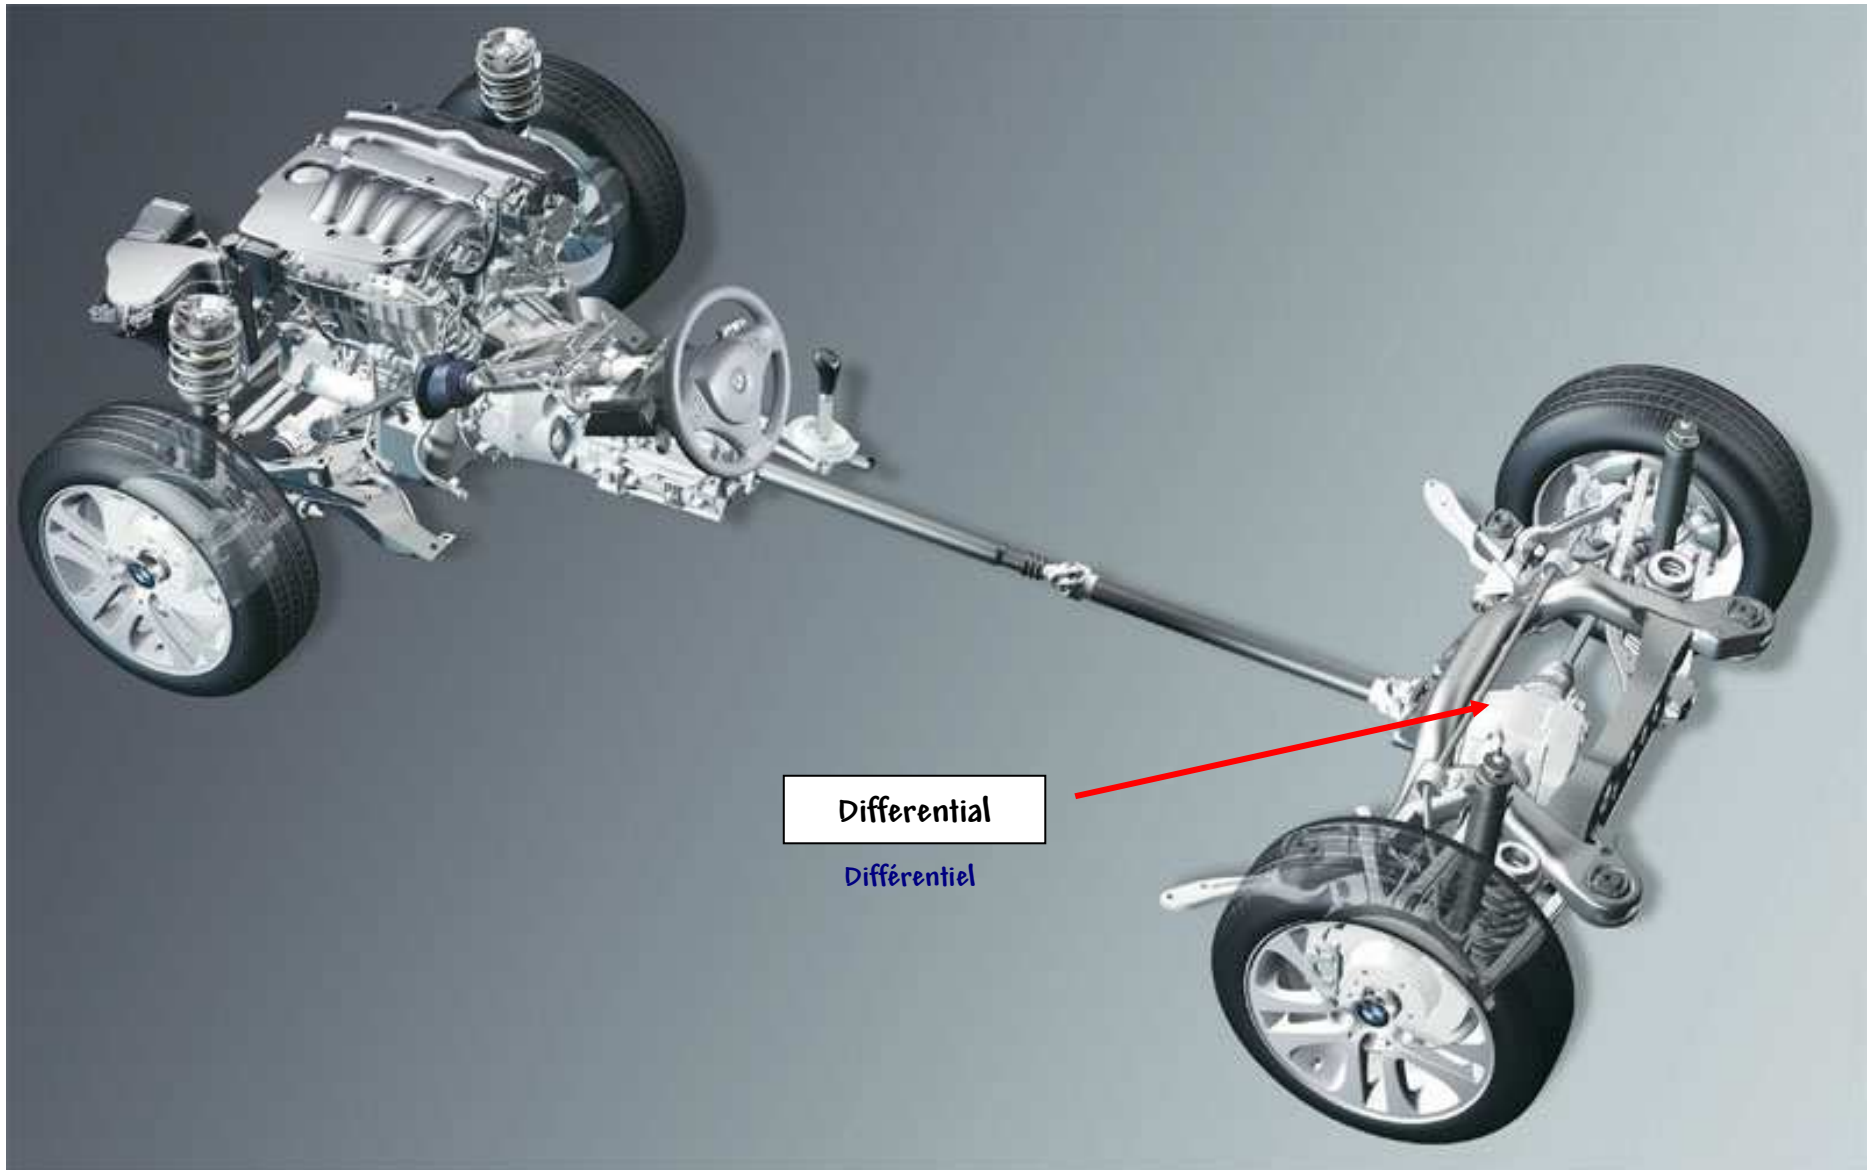

Differential

Différentiel

**It dismissal the movement in 90 degrees and
distributed the couple on driving wheels ...**

TRANSMISSION (Drive Line)




It passes on the speed and the engine torque up to driving wheels..

TRANSMISSION (Drive Line)




They pass on the driving strength in the road ...

TRANSMISSION (Drive Line)

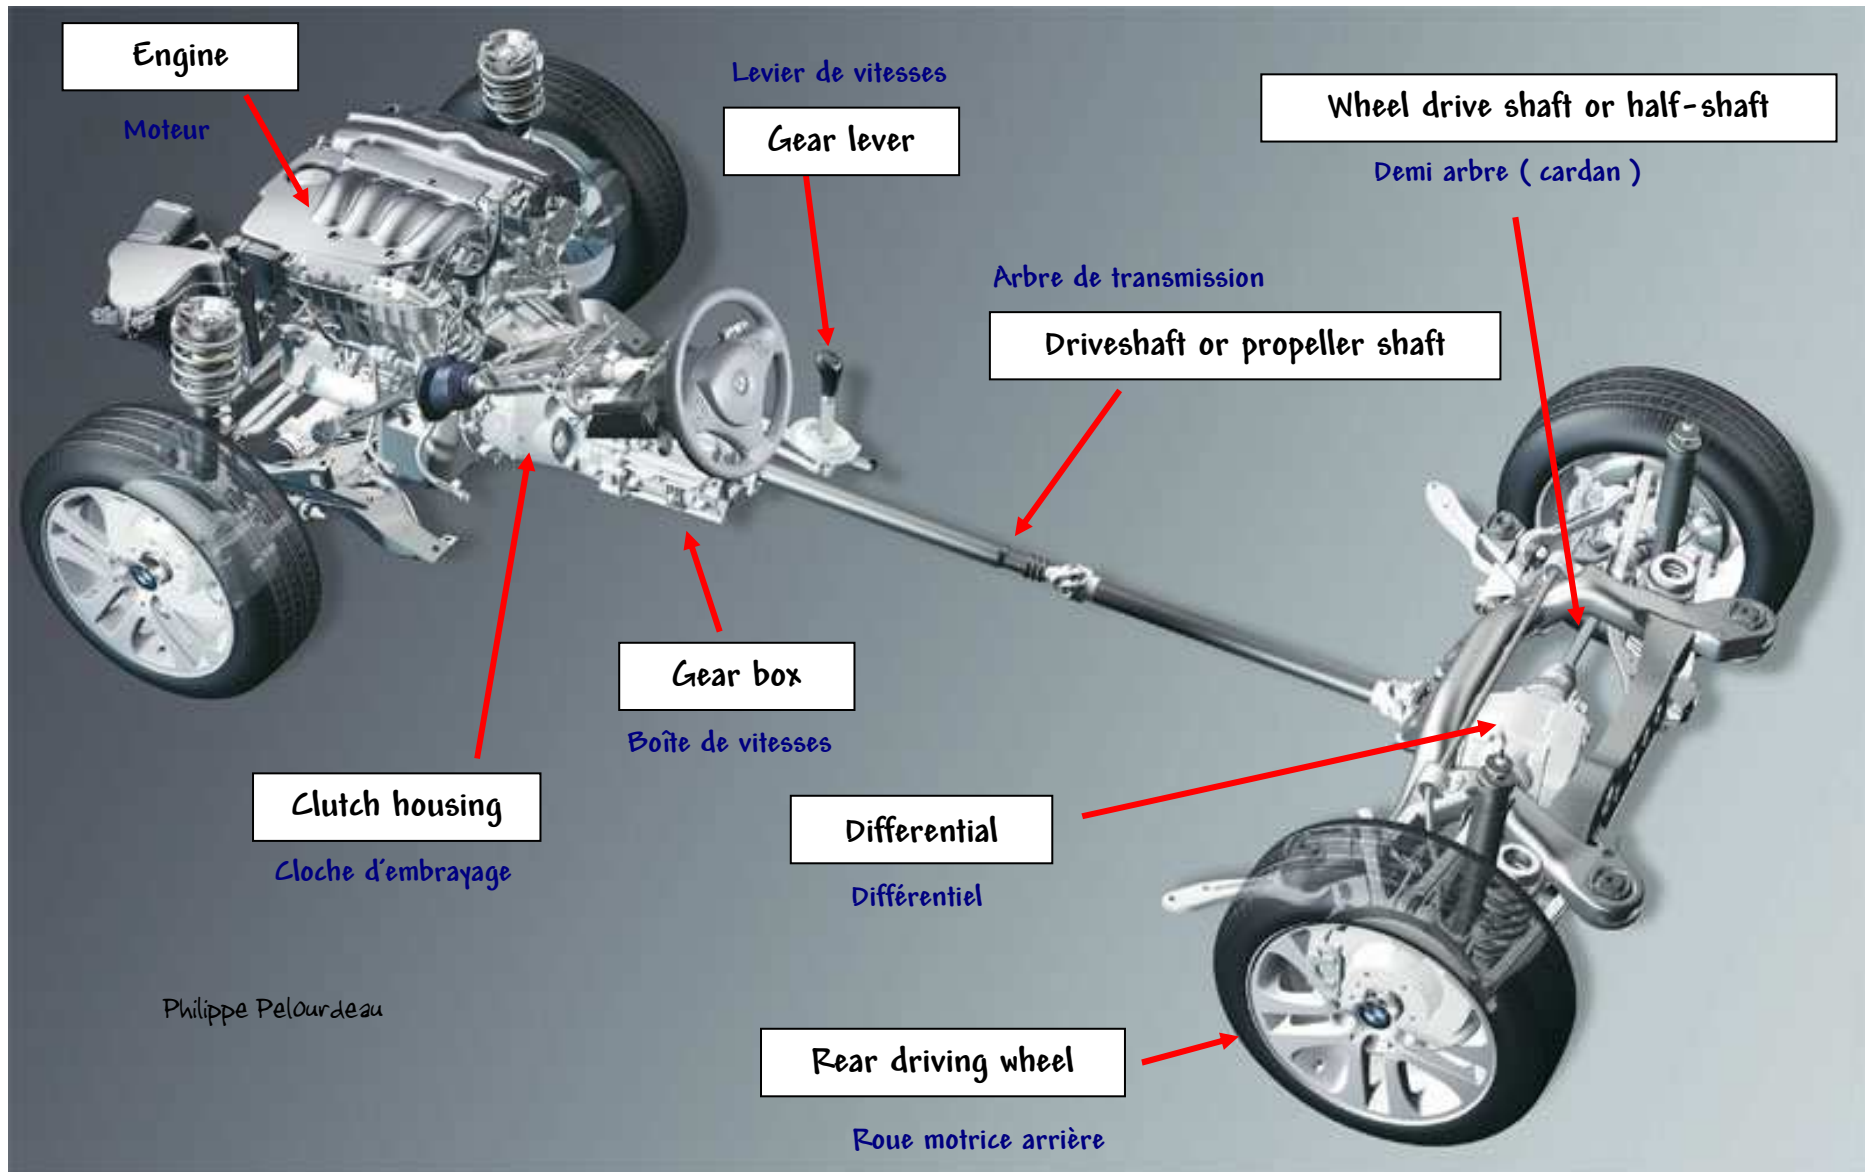

Transmission

TRANSMISSION (Drive Line)

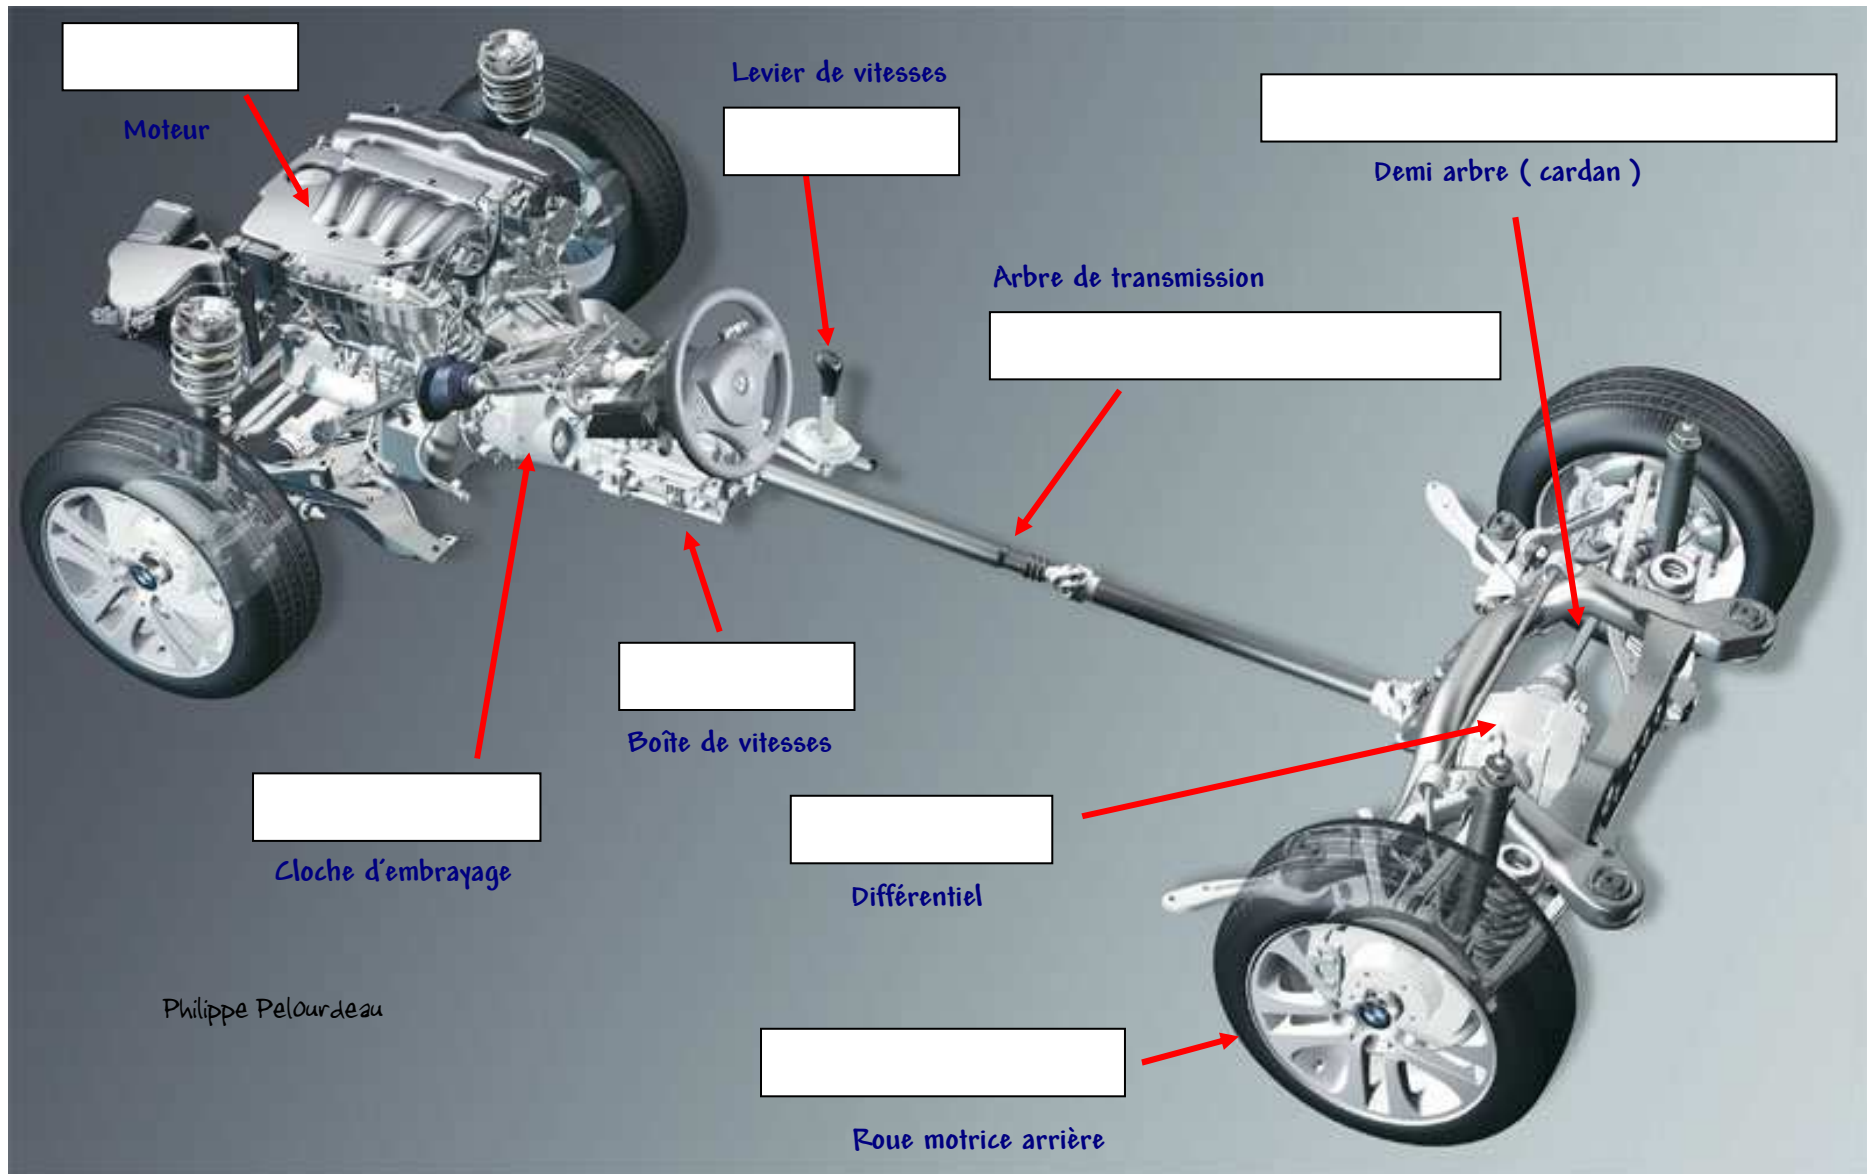

Transmission